 



UR2-P / UR2-R

Ed. 2.26

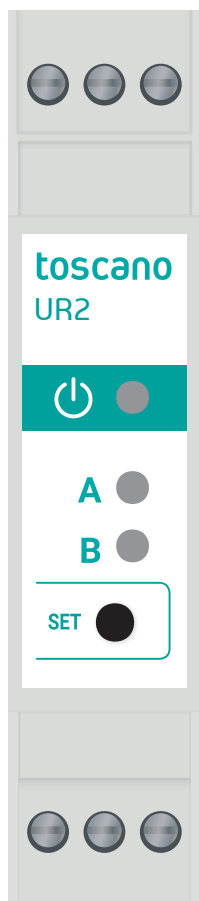


ENGLISH (EN) User manual

 Radio control equipment

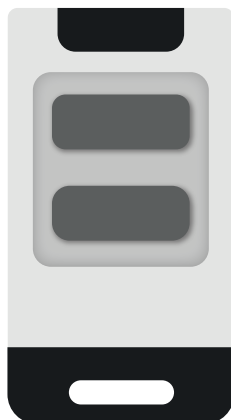


1. SIGNALING AND CONTROL

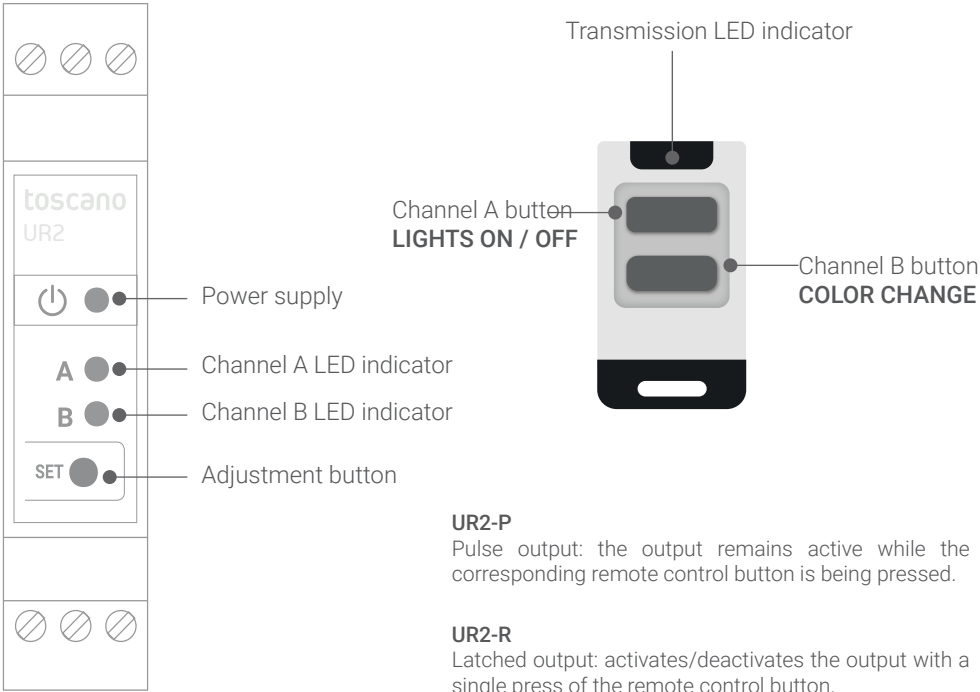

2. WIRING

Connect the transformer power supply for the lights in series with contact "A".
Contact "B" will close momentarily.
Each time the light color changes

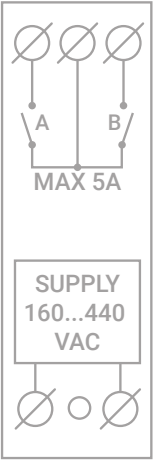


3. FUNCTIONS


○ Registering a new remote control

Briefly press the module's SET button.


! To register a new remote control, the previously registered remote controls must first be deleted.

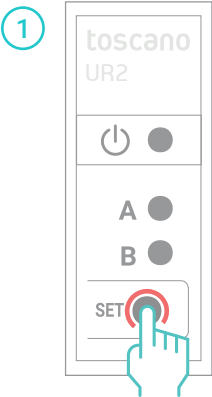


Briefly press any button on the remote control.

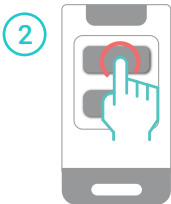

Briefly press the module's SET button.

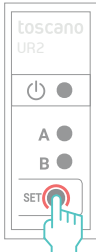


Briefly press any button on the remote control.

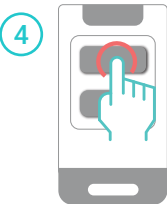

○ Deleting all registered remote controls

Press and hold the SET button for 4 seconds.

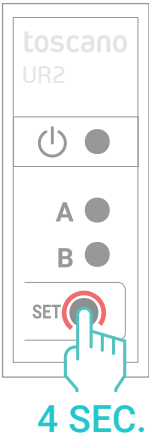

4. TECHNICAL SPECIFICATIONS

Receiver

Power supply	160...440 VAC - 50/60 Hz
LED indicators	Power supply, Channel A activated, Channel B activated
Power consumption	2 VA
Reception frequency	433.92 MHz
Receiver sensitivity	-108 dBm
Operating temperature	-10°...+60° C
Relay outputs	5 A / 250 VAC max.
Maximum terminal cross-section	2.5 mm ²
Weight / IP	58 g / IP20
Dimensions (WxHxD)	90x64x18

Remote control

Power supply	12 VDC battery
Transmission frequency	433.92 MHz
Transmission power	10 mW
Security coding	Rolling Code
Operating temperature	-10°...+60° C
Dimensions (width x height x depth)	18 x 90 x 64

