



Snap Fix Glazing Bar System Technical & Installation Guide



Snap Fix Rafter Top Glazing Bar

The Snapa[®] Rafter Top Glazing Bar is extruded as an easy-to-install budget glazing bar. The Snapa[®] glazing bar works well with 10mm, 16mm, 25mm, 32mm and 35mm Axiome[®] multiwall polycarbonate sheet. Whilst Snapa[®] bars are ideal for smaller DIY type projects, where greater longevity or strength is required, it is recommended to use Alukap[®]-XR glazing bars.

The Snapa[®] bar is very fast to install with an easy snap-fix connection.



Common uses:

- ✓ Canopies
- ✓ Covered Decking Areas
- ✓ Carports
- ✓ Verandas
- ✓ Covered walkways
- ✓ DIY

Qualities:

- ✓ Quick snap fix fitting
- ✓ Installer friendly
- ✓ Easy to cut
- ✓ Economical solution
- ✓ Time saving co-extruded gaskets



Snapa® : Lean-to Bar

The Snapa® bar glazing system has been designed and manufactured with multiple click connection points so that it will work well with Axiome® multiwall sheets of almost any thickness. The high quality PVC profiles are extruded with a significant wall thickness providing a high degree of strength and rigidity.

Lean-to Bar



Length	Description	Code
2.0m	Snapa® Lean-to Bar 10, 16, 25, 32 & 35mm - Inc Endcap White	AG18W
2.5m	Snapa® Lean-to Bar 10, 16, 25, 32 & 35mm - Inc Endcap White	AG19W
3.0m	Snapa® Lean-to Bar 10, 16, 25, 32 & 35mm - Inc Endcap White	AG13W
4.0m	Snapa® Lean-to Bar 10, 16, 25, 32 & 35mm - Inc Endcap White	AG15W
5.0m	Snapa® Lean-to Bar 10, 16, 25, 32 & 35mm - Inc Endcap White	AG14W
6.0m	Snapa® Lean-to Bar 10, 16, 25, 32 & 35mm - Inc Endcap White	AG16W

Snapa® : Gable Bar

Finishing off the last rafter on a roof has previously been a challenging compromise of install time, aesthetics, and the struggle of creating a waterproof seal. The new Snapa® Gable Bar has been specially manufactured to overcome these challenges and now provides a fast and easy way to finish the last rafter glazing bar on any Axiome® multiwall roof. This Snapa® Gable bar now provides a single glazing bar solution with an easy snap fix connection, which finishes off the end of the roof with a single snap down action.

Gable Bar



Length	Description	Code
2.0m	Snapa® Gable Bar 10, 16, 25, 32 & 35mm - Inc Endcap White	AG320W
2.5m	Snapa® Gable Bar 10, 16, 25, 32 & 35mm - Inc Endcap White	AG325W
3.0m	Snapa® Gable Bar 10, 16, 25, 32 & 35mm - Inc Endcap White	AG330W
4.0m	Snapa® Gable Bar 10, 16, 25, 32 & 35mm - Inc Endcap White	AG340W
5.0m	Snapa® Gable Bar 10, 16, 25, 32 & 35mm - Inc Endcap White	AG350W
6.0m	Snapa® Gable Bar 10, 16, 25, 32 & 35mm - Inc Endcap White	AG360W

Snapa® : Wall Bar

In a world first, the new Snapa® Wall Bar is the first budget snap fix glazing bar designed specifically to finish a roof against a side wall. Leaving the days of fiddly flashings and hybrid trims behind, the Snapa® Wall bar is a clever two-part bar that reduces installation time and gives a smart clean finish to your roof. Compatible with nearly all thicknesses of Axiome® Multiwall sheets, the Snapa® Wall Bar is simple to install and makes it easy for DIYers to create a waterproof finish with a simple snap-fix connection.

Wall Bar



Length	Description	Code
2.0m	Snapa® Wall Bar 10, 16, 25, 32 & 35mm - Inc Endcap White	AG420W
2.5m	Snapa® Wall Bar 10, 16, 25, 32 & 35mm - Inc Endcap White	AG425W
3.0m	Snapa® Wall Bar 10, 16, 25, 32 & 35mm - Inc Endcap White	AG430W
4.0m	Snapa® Wall Bar 10, 16, 25, 32 & 35mm - Inc Endcap White	AG440W
5.0m	Snapa® Wall Bar 10, 16, 25, 32 & 35mm - Inc Endcap White	AG450W
6.0m	Snapa® Wall Bar 10, 16, 25, 32 & 35mm - Inc Endcap White	AG460W

Alukap®-XR : Endstop Bar

Issues with the lower end of polycarbonate glazing panels gave rise to the innovation of a substantial drip trim that will not warp, discolour, crack or fall off like the inferior plastic equivalents. This crucial area is all too often left to chance, and can cause costly damage to the glazing. The Alukap®-XR End Stop, puts a stop to that!

Endstop Bar



Length	Code (10mm)	Code (16mm)	Code (25mm)	Code (35mm)
3.0m	AKX106	AKX112	AKX118	AKX130
3.6m	AKX108	AKX114	AKX120	AKX132
4.8m	AKX110	AKX116	AKX122	AKX134

Snapa® : Endcap

The Snapa® Endcap is designed to provide an aesthetically pleasing finish to the ends of the Snapa® glazing bar. A simple screw with a cap locates in to the top of the bar and covers the end section of the glazing bar whatever height of glazing is used.

Endcap



Description	Code
Snapa® Bar Endcap - White	AG17W

Snapa® : Top Wall Flashing

When flashing from a back wall onto a roof the use of a lead flashing on its own is prone to leaks and an unsightly finish. Now you can properly seal and flash the back of your lean-to roof with our Snapa® Top Wall Flashing with its unique foam gaskets! Manufactured from aluminium the Top Wall Flashing has an expected life-span of 20 plus years and will help stop any drips or leaks for many years, when installed correctly.

Top Wall Flashing



Length	Description	Code
2.0m	Snapa® Top Wall Flashing - White	AG502W
3.0m	Snapa® Top Wall Flashing - White	AG503W
6.0m	Snapa® Top Wall Flashing - White	AG506W

Snapa® : Aluminium Super Ridge

Snapa® aluminium Super Ridge is another game changer in the roofing market. Protecting the ridge of a roof is crucial and with the installation of the Snapa® Super Ridge you can add years of lifespan to your roof. Designed with integrated pre-formed foam gaskets to fit over the of the Axiome® sheets, the Snapa® Super Ridge is an installer's dream. The patented design allows for a good variety of roof pitches with the gaskets being flexible enough to seal again the Axiome® sheets, and create a longer lasting superior ridge solution.

Super Ridge



Length	Description	Code
2.0m	Snapa® Super Ridge - White	AG602W
3.0m	Snapa® Super Ridge - White	AG603W
6.0m	Snapa® Super Ridge - White	AG606W

Snapa® : Aluminium Super Ridge End Cap

Crafted with striking form, our new Snapa® Super Ridge End Cap is designed to be the crowning element to every Snapa® ridged roof. Shaped to add new level of waterproofing to the end of the Snapa® Super Ridge, the new Super Ridge End Cap helps protects one of the most crucial areas of installation and provides an unrivalled finish to user's roofs. Manufactured from aluminium, the new Snapa® Super Ridge is very durable and adds extra longevity to the lifespan a roof. The simple and innovative location prongs ensure that installation is fast and easy for DIYers and installers alike.

Super Ridge End Cap



Description	Code
Snapa® Super Ridge End Cap - White	AG609W

Securbond® : Flashing Tape


Securbond® Flashing Tape is a self-adhesive sealing tape used in a variety of applications to provide a weather tight seal between surfaces.



Length	Description	Code
10m	Securbond® 150mm Flashing Tape	AG73
10m	Securbond® 200mm Flashing Tape	AG74


Snapa® : Typical Roof Component Assembly Example

Snapa® Rafter Supported Lean-to

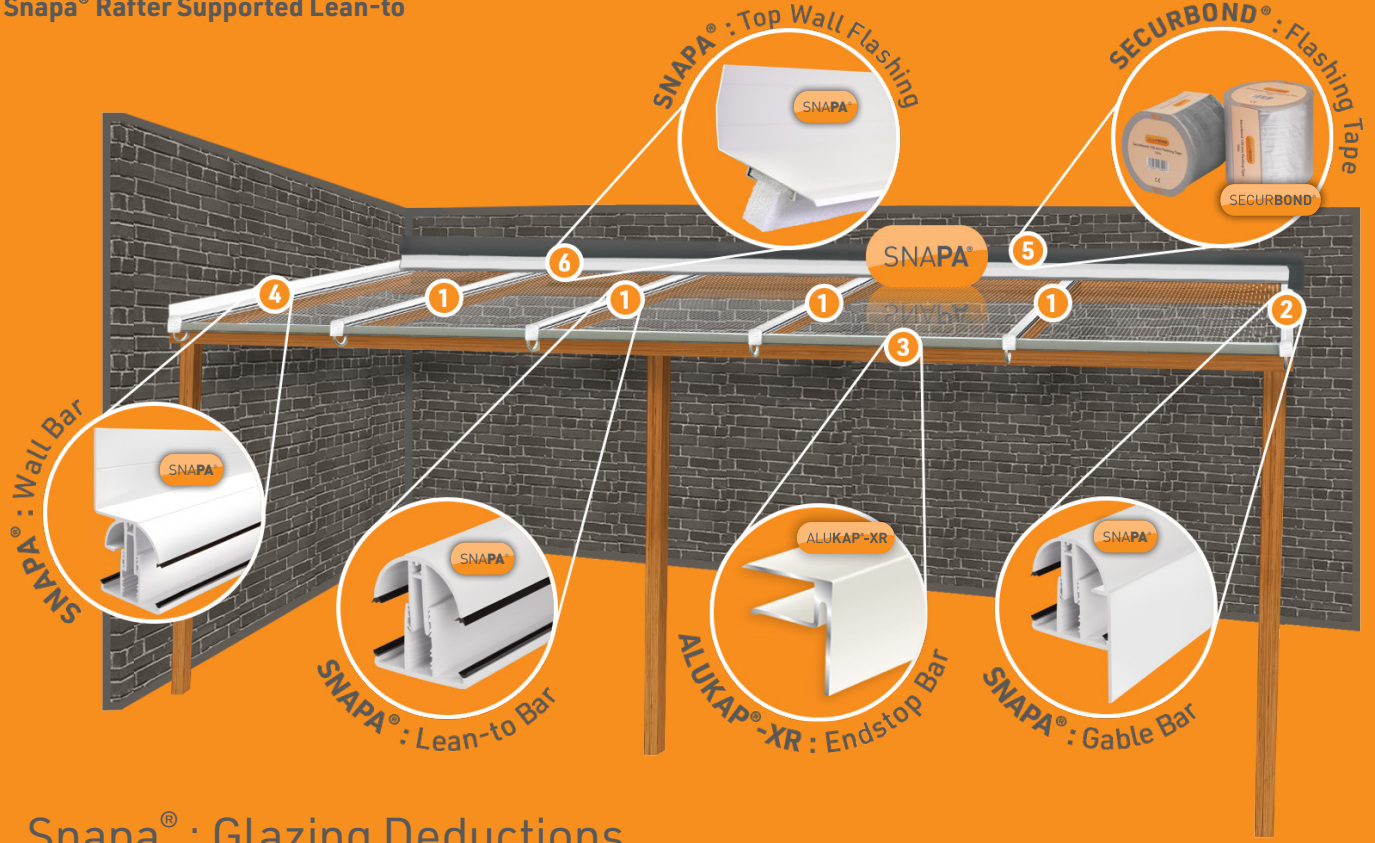

Snapa® : Glazing Deductions

Glazing deduction guidelines for the Snapa® bar system are shown on this diagram. Samples are readily available for users to test and verify the exact sizes according to their site requirements.

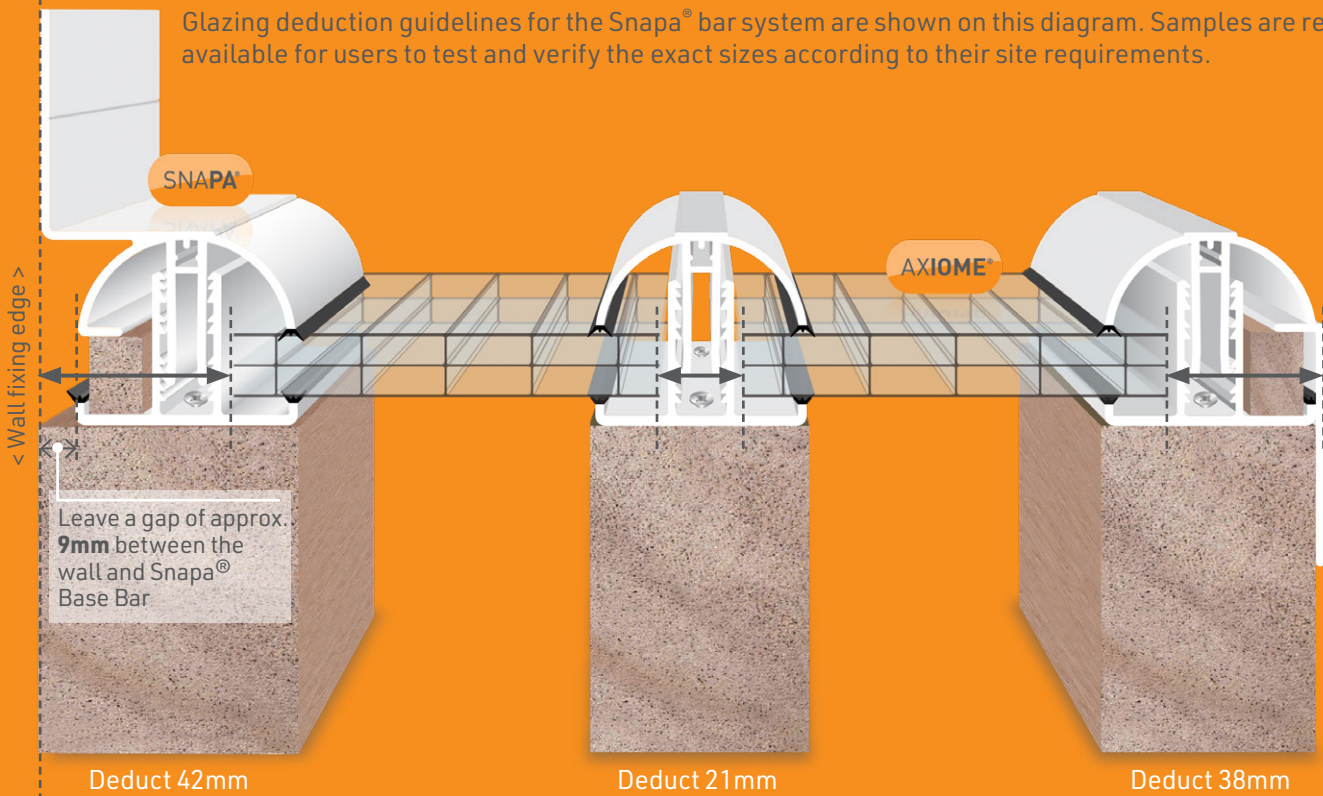

Snapa® : Installation Guide

<p>Wall Bar Top Clip</p>	<p>Standard Top Clip</p>	<p>Gable Top Clip</p>	<p>Top Wall Flashing plus Foam Gasket</p>	<p>Snapa® End Cap</p>
--------------------------	--------------------------	-----------------------	---	-----------------------


<p>Snapa® Super Ridge Bar</p> <p>Ridge Gasket (included)</p> <p>Stainless Steel Fixing (included)</p>	<p>Endstop Bar</p> <p>ALUKAP®-XR</p>	<p>Securbond® Flashing Tape</p> <p>SECURBOND</p> <p>Timber battens</p>
<p>Anti-dust Tape (breathable)</p> <p>ALUKAP®-XR</p> <p>*Optional item</p>	<p>Securbond® Sealant</p> <p>SECURBOND</p>	

Snapa® Super Ridge End Cap


<p>Plan View</p>	<p>Back View</p> <p>Side Elevation</p>
------------------	--

Designed to Suit Almost any Axiome® Multiwall Thickness


The Snapa® bar glazing system has been designed and manufactured with multiple click connection points so that it will work well with Axiome® multiwall sheets of almost any thickness. The high quality PVC profiles are extruded with a significant wall thickness providing a high degree of strength and rigidity. The diagrams below show the Snapa® bar being used with each option of Axiome® multiwall sheet.

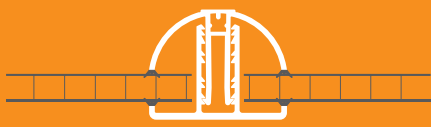


Snapa® bar with **10mm Axiome®**

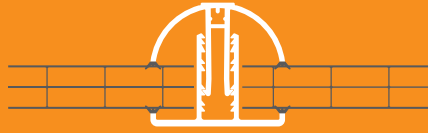


Snapa® bar with **16mm Axiome®**

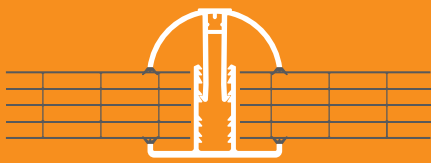

Snapa® bar with **25mm Axiome®**

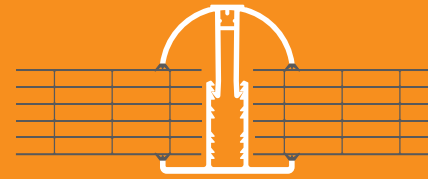

Snapa® bar with **32mm Axiome®**

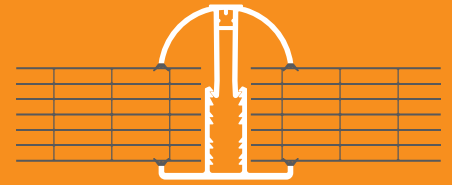

Snapa® bar with **35mm Axiome®**

Tools required



Wear protective gloves, glasses and ear protectors when required.



Circular saw and a cordless screwdriver with a drill bit holder / extension




Tape measure, Phillips headed screwdriver, soft / rubber headed hammer, a straight edge tool and Securbond® Sealant plus a sealant gun

Snapa® : Installation Guide

- 1 Take all **measurements** of the roof and glazing bars

IMPORTANT: Wear sufficient protective clothing

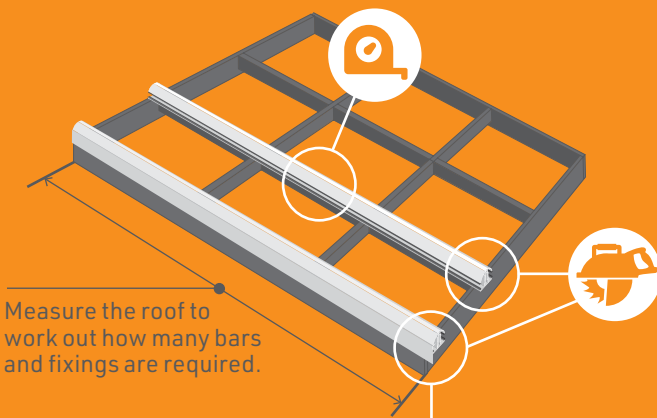


Measure the roof to work out how many bars and fixings are required.

Measure and cut the Snapa® bar and Snapa® Gable bars to length, **30mm-40mm longer than the rafter** so they overhang into the correct position for the gutter end of the roof.

- 2 Fix **all the base bars** to the top of the timber rafters

NOTE: Remove the **protective amber film** supplied on the Snapa® base bar before fixing them to the rafters.

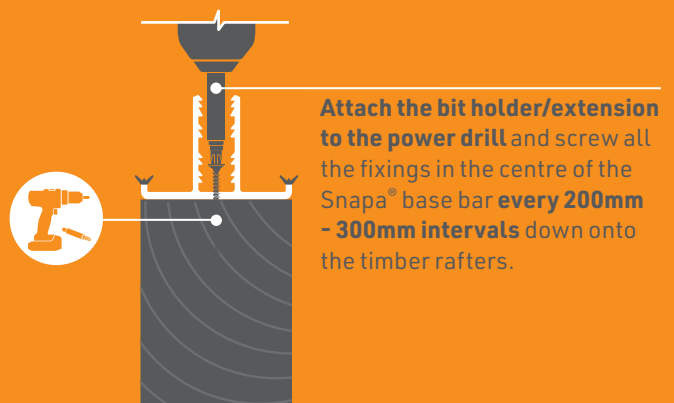


Attach the bit holder/extension to the power drill and screw all the fixings in the centre of the Snapa® base bar **every 200mm - 300mm intervals** down onto the timber rafters.

NOTE - Cut the Snapa® Top Clip part slightly longer to accommodate the depth of the Alukap®-XR Endstop Bar.

3 Prepare the Axiome® sheets by **applying the ANTI-DUST TAPE**

IMPORTANT - Store the Axiome® sheets in a **clean, dry area**. All adhesives suffer reduced initial bonding strength in cold conditions - **avoid applying tape below 5°C**. The Axiome® branded tape side is **UV protected**.

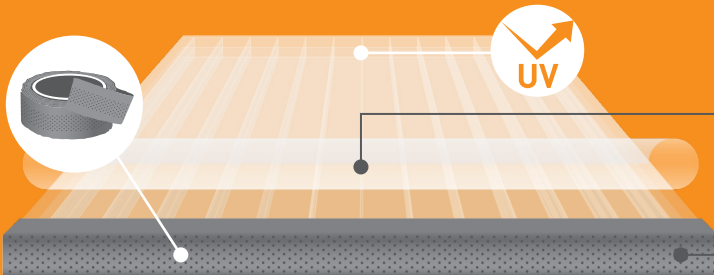


Ensure that you are working in a **clean dry area**, **pull the protective film back on both sides approximately 100mm from the open edge**, taking care not to scratch the surface.

Stick the **Axiome® Anti-dust Breather Tape** onto the top surface in a straight line from one side to the other, allowing enough to wrap around and bond to the underside. **If it is necessary to join the tape mid-panel, ensure that there is a minimum 25mm overlap.**

4 Apply the **Endstop bar** to the Axiome® sheet

NOTE - We recommend using the Alukap®-XR Endstop bar as a sheet closure at the bottom sealed end.

Cut the Endstop bar to the width of each Axiome® sheet, and **push-fit on partway ONLY** so that the open edge of the Endstop bar just covers the anti-dust breather tape.

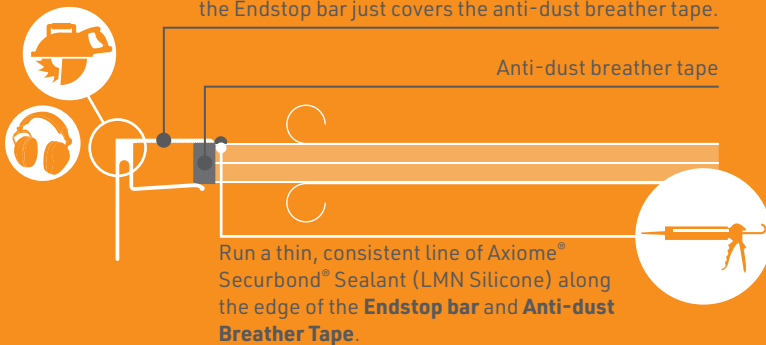

Run a thin, consistent line of Axiome® Securbond® Sealant (LMN Silicone) along the edge of the **Endstop bar** and **Anti-dust Breather Tape**.

5 **PUSH** the Endstop Bar into place

Push the **Alukap®-XR Endstop bar fully into place**, so that the leading edge slides over the bead of Securbond® Sealant, creating a seal that eliminates capillary action.



The Axiome® sheet is now ready for installation.


- [▶ View Our How 2 Cut Axiome Polycarbonate Roofing Sheets Video](#)
- [▶ View Our How 2 Tape Polycarbonate Roofing Sheets Video](#)

6 Fit the **Axiome® sheets** and **Endstop bars** to the Snapa® base bars

Install the Axiome® sheets into position allowing for a **2-3mm gap** either side for expansion.

Pull back the protective film about 25mm on the remaining sides to allow for the bar top caps.

Measure and cut timber battens to be placed on either side of the roof structure to give support to the Snapa® Gable Top Clip Bars. The battens **width is 12mm and height (x) equates to the glazing thickness plus 2mm.**

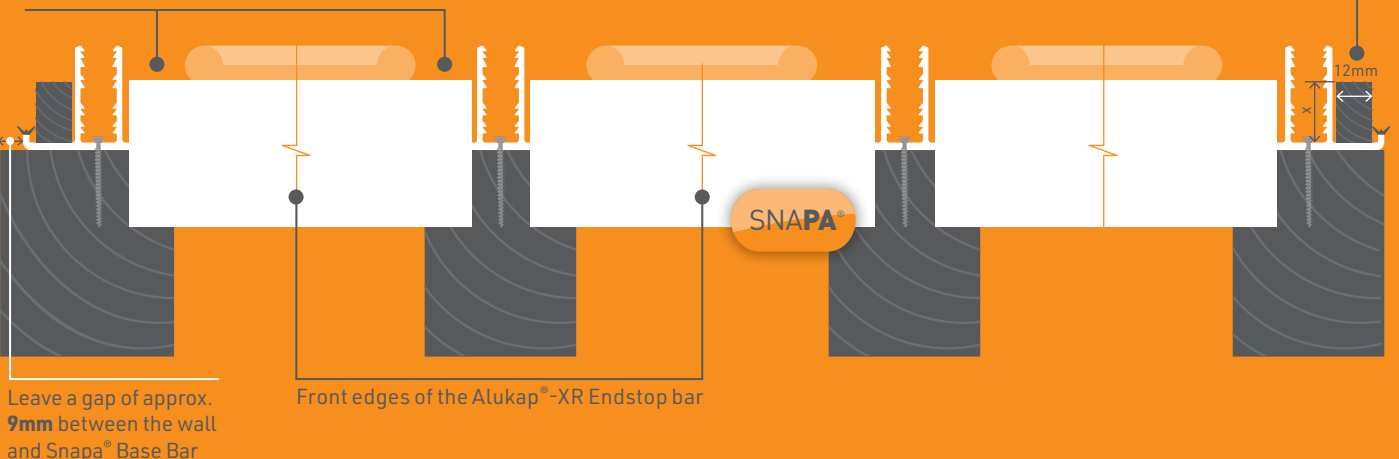

Leave a gap of approx. **9mm** between the wall and Snapa® Base Bar

Front edges of the Alukap®-XR Endstop bar

Securbond®
Flashing Tape

7 Fit the **Snapa® Top Clip Bars** to fix the glazing in place

Gently **snap down** the Snapa® Wall Top Cap, Standard Top Cap and Gable Top Cap using a **soft / rubber headed hammer**, so the top caps are in the correct position.

Add extra anchoring screws for roofs in exposed areas.

Snapa® Standard
Top Clip Bar

Snapa® Gable Top
Clip Bar

SNAPA®

Cut the Snapa® Top Clip
slightly longer than the base

Use a Securbond®
Sealant to ensure a
water tight finish.

Side front detail

Screw on all the **Snapa®
Endcap** covering the open
ends of the Snapa® bars to
creating a neat finish at the
front of the roof.

8 Finish of the back of the lean-to roof – fit the **Snapa® Top Wall Flashing**

Place, measure and cut the aluminium **Snapa® Top Wall Flashing** and foam gasket to match the full width of the roof. Place the Top Wall Flashing onto your roof and mark on the foam gasket where each glazing bar meets Top Wall Flashing. Then cut out a notch at each mark so that the Foam Gasket sits flat on the Axiome® Sheets and over each Glazing Bar. Alternatively, you can simply apply downward pressure to compress the foam gasket at each glazing bar to ensure the Foam Gasket Seals against the Axiome® Sheets properly.



Push down the prepared **Snapa® Top Wall Flashing** with the prepared gasket in place and fix to the wall using suitable stainless steel screws.

Pull the protective film back from the back of the glazing sheets enough to clear the foam gasket.

SNAPA®

< Axiome® Glazing Sheet >

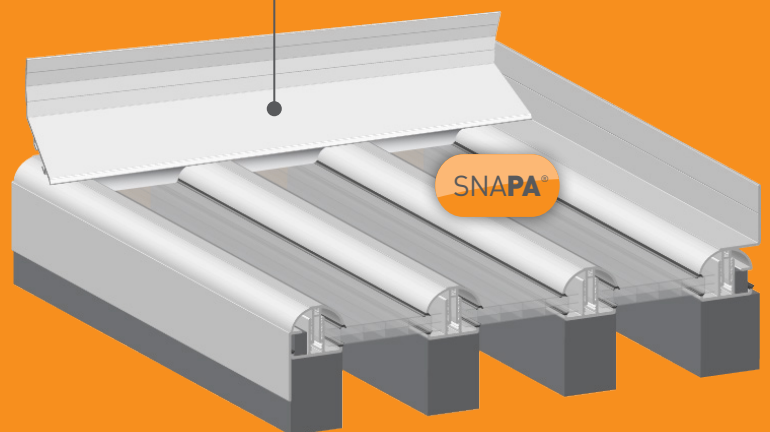


Illustration of the Snapa® Top Wall Flashing

9

Complete the roof structure by fitting **SecurBond® Flashing Tape** to the wall to create a waterproof seal




IMPORTANT:
Once the Snapa® bars and Axiome® sheets have been fully installed, **remove the protective film from the top bars and sheets**, making sure that it's clean before removal. To clean the Axiome® sheet use plenty of clean, soapy water and a soft, abrasive-free cloth.


10

Measure and fit the **NEW Snapa® Super Ridge and Super Ridge Endcap** to the apex of a double sided roof.

Section detail of the Snapa® Super Ridge and Foam Gasket

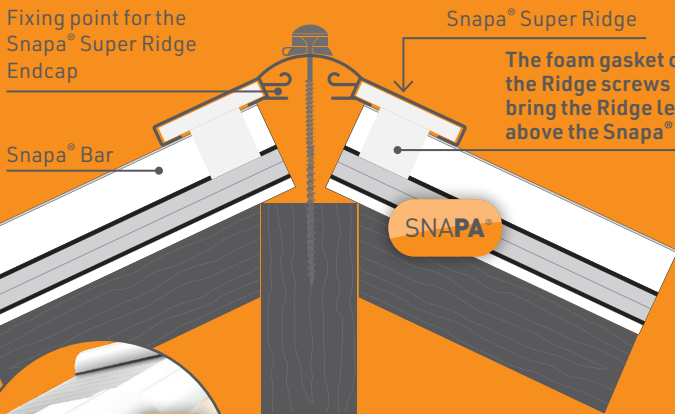


Front elevation detail of the Snapa® Super Ridge Endcap and Snapa® Gable Bars

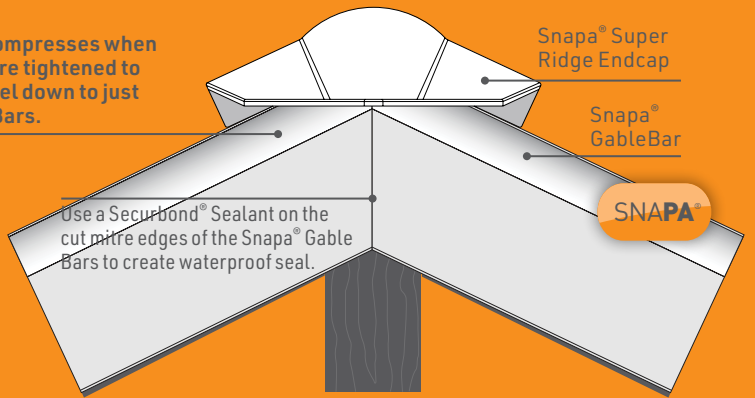

Use a Securbond® Sealant on the two fixing prongs and under the extended part of the back section to secure and make a waterproof seal around the Super Ridge Endcap and the Super Ridge bar.

Screw down the Corrapot® Stainless Steel fixings approx. 200mm - 300mm apart.

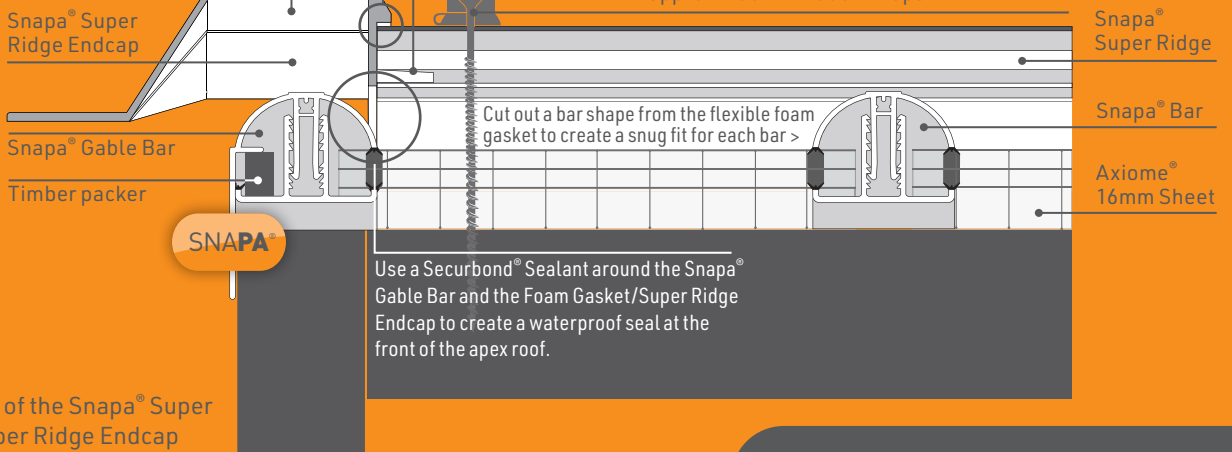

Use a Securbond® Sealant around the Snapa® Gable Bar and the Foam Gasket/Super Ridge Endcap to create a waterproof seal at the front of the apex roof.

Cross section of the Snapa® Super Ridge and Super Ridge Endcap

WARNING : REGISTERED DESIGNS & PATENTS

The IP of the designs in this brochure are protected by internationally registered design rights. Many products are also protected with active or pending Patents. Clear Amber will not hesitate to take appropriate legal action if its rights in this respect are infringed.

© Copyright – Clear Amber Group Ltd – February 2024. No part of this publication may be copied, reproduced, scanned, or stored in any electronic database, whether in whole or in part, in any form or by any means, without permission in writing from Clear Amber. Clear Amber will not hesitate to take appropriate legal action if its rights in this respect are infringed.

Inasmuch as Clear Amber have no control over the circumstances in which our material may be used, or site specific parameters, we cannot guarantee that any particular results will be achieved. Users should carry out their own tests to determine the suitability of the material for their application. Installers should satisfy themselves that published permissible loadings and bar spacings for Snapa® structures, together with any supporting posts, frames, or walls and fixings, are sufficient to provide adequate strength for the intended use and to meet regional loading requirements. Installers should also obtain their own job-specific structural engineer's report for their individual site. Samples are readily available to users to test and verify the exact sizes according to their site requirements.